Dismount Ceiling Bracket

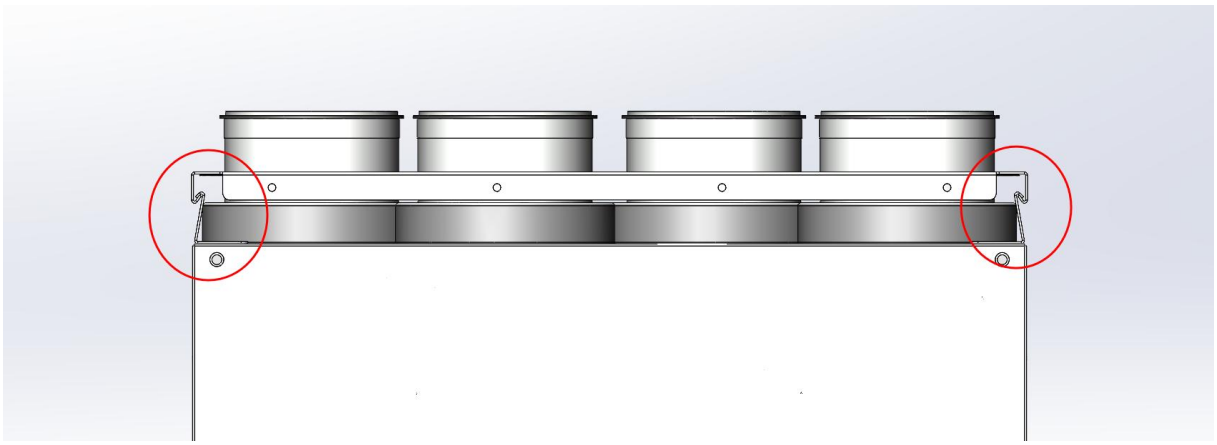

Lift the unit slightly upwards so the hooks separate

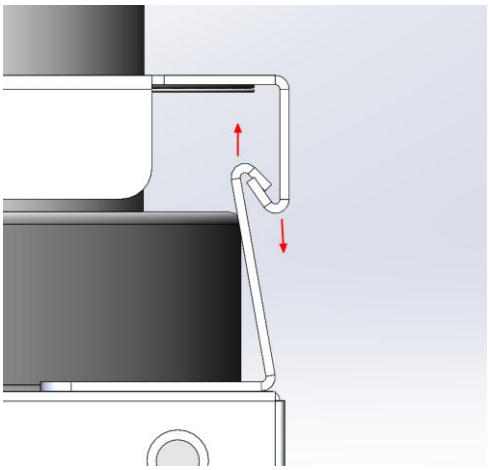

Should look similar to this

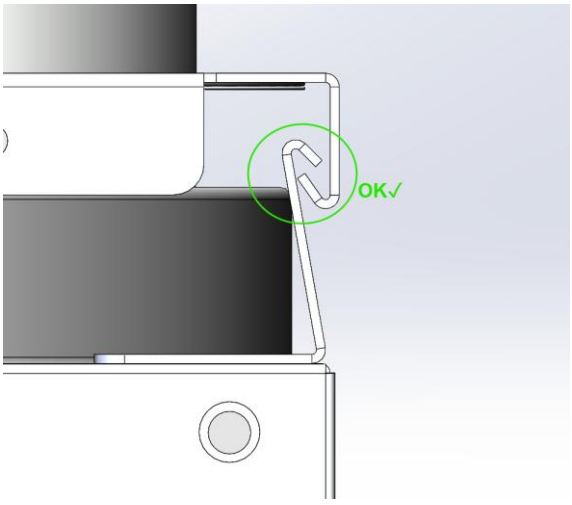

Insert a screwdriver or a similar tool at the red marker (see image) and bend slightly inwards

(could also use an adjustable plier)

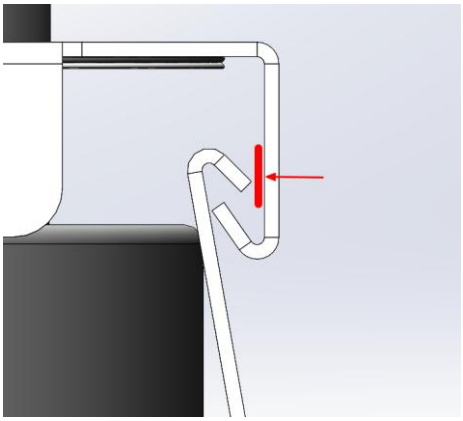

Insert the dismount tool in a similar manner

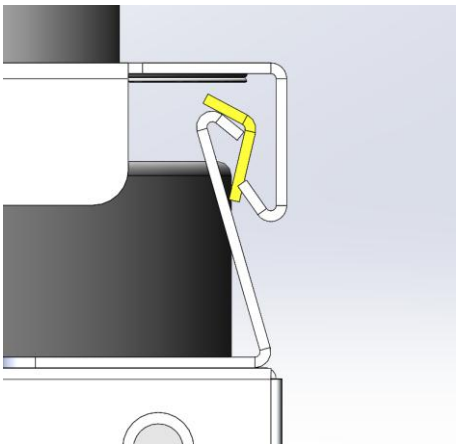

Insert it all the way so the hook bends outwards completely

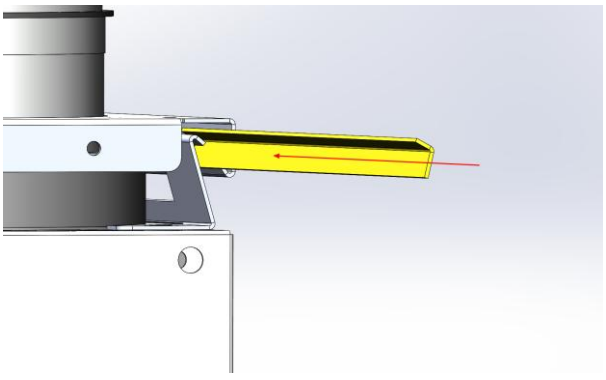

Lower the unit on this side, then repeat on the other. Depending on the unit configuration, you may not need to use the dismount tool on the other side – tilting the unit slightly may be enough to remove it. Be ready to catch it.