Installation of ventilation unit with ceiling bracket

1. Cut the ceiling openings for the ducts.
    a. We recommend 130 mm minimum hole size to ensure a proper fit between the ducts and the duct collars.

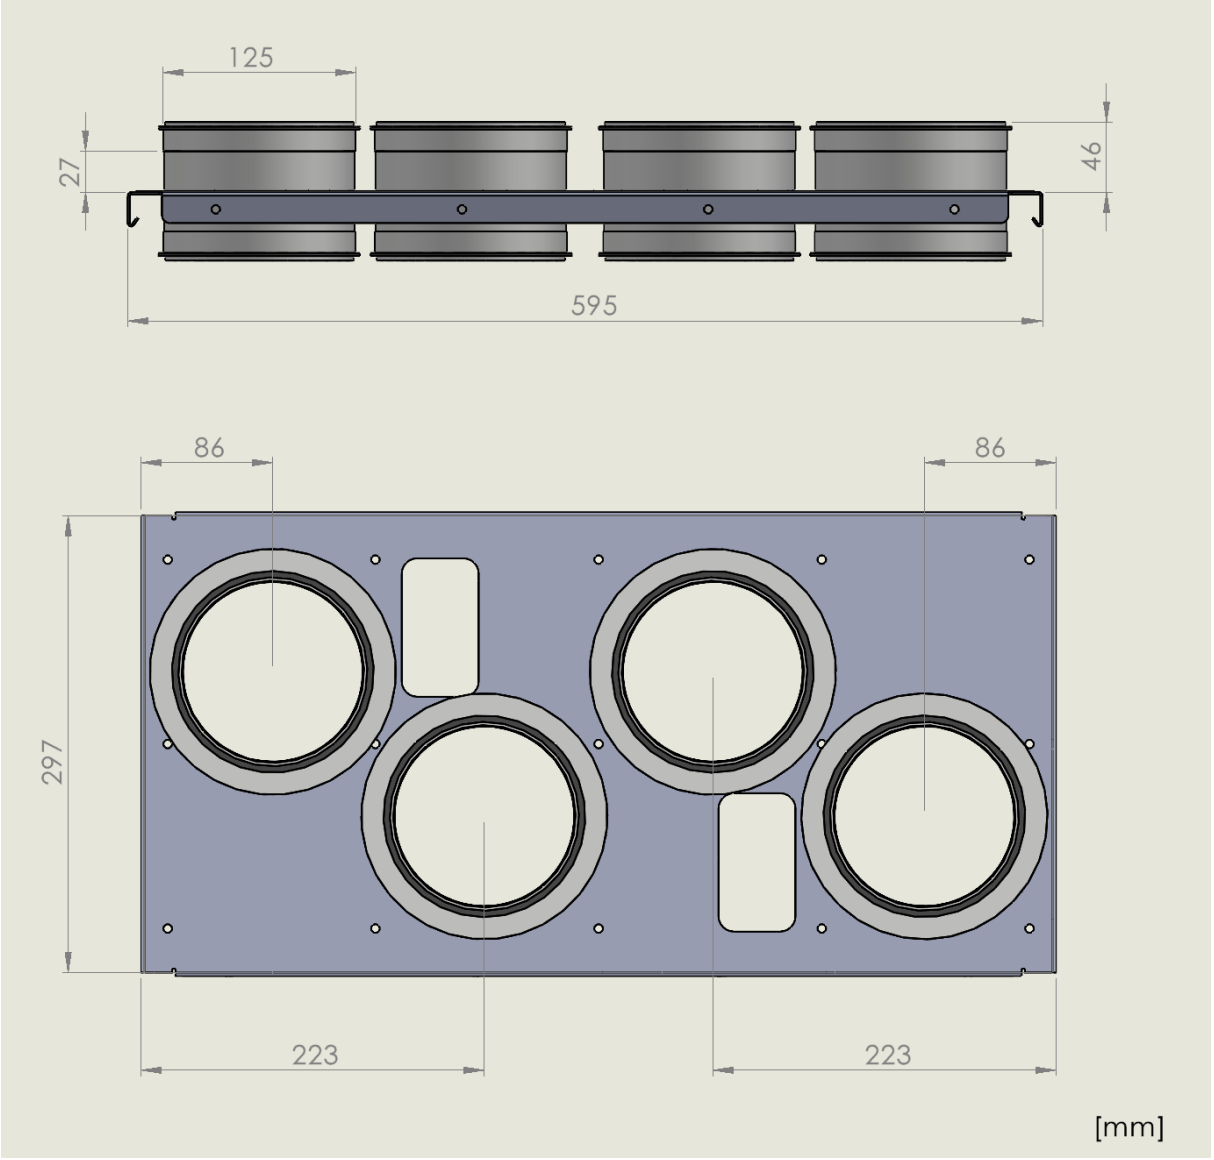

2. Press the ceiling bracket into place, aligning the flow labels on the bracket with the corresponding duct.

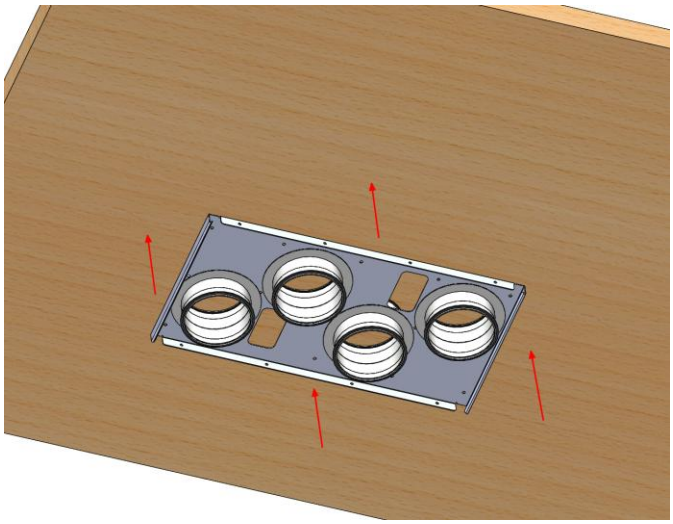

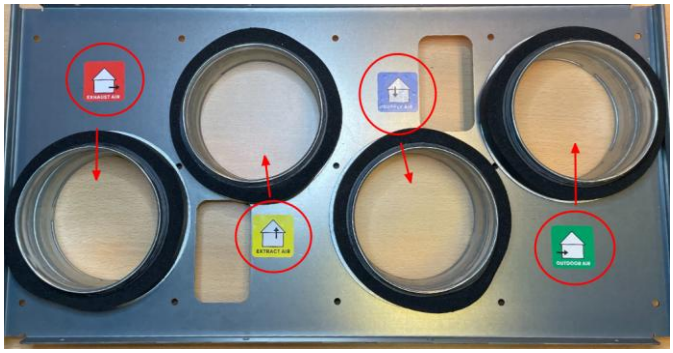

3. Screw the ceiling bracket firmly into place.
   Make sure you fasten into a load-bearing structure capable of supporting the unit's weight.

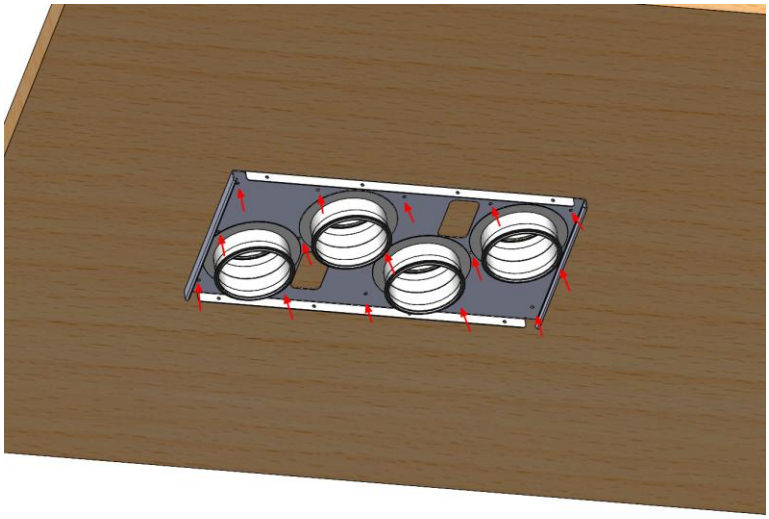

4. Fit the hooks to the unit and screw them firmly into place.

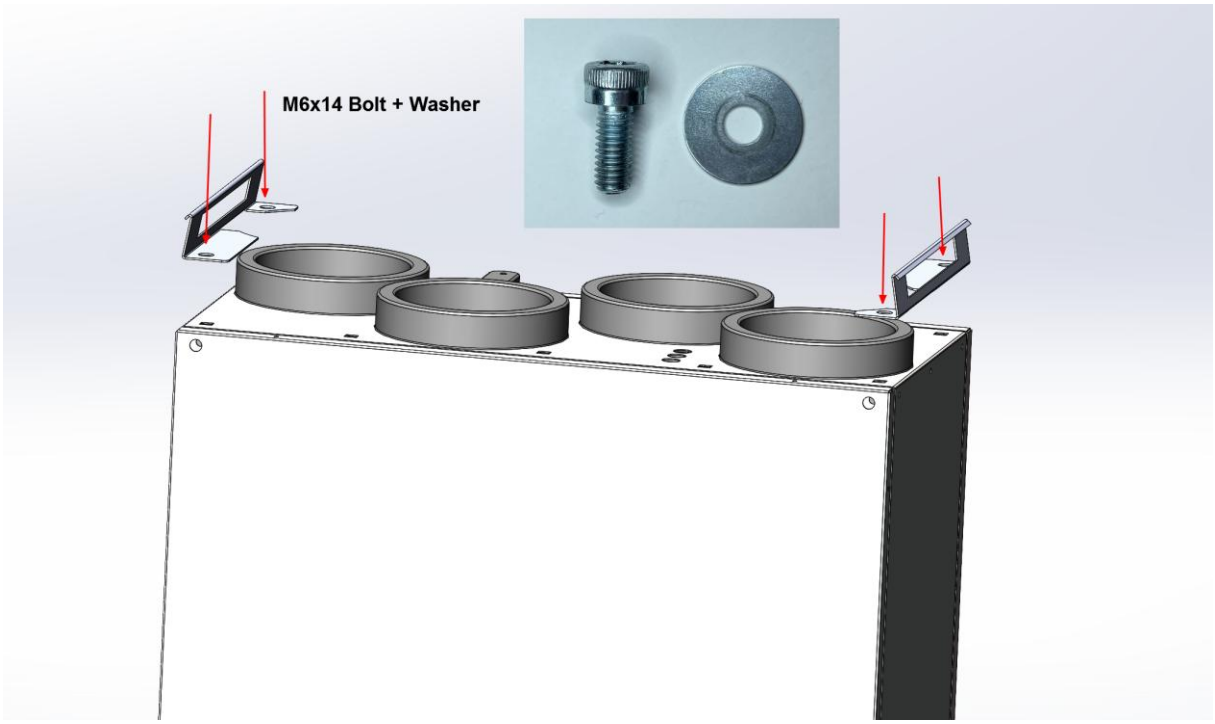

5. Check that the flow labels match between the unit and the ceiling bracket, then press the unit into place.

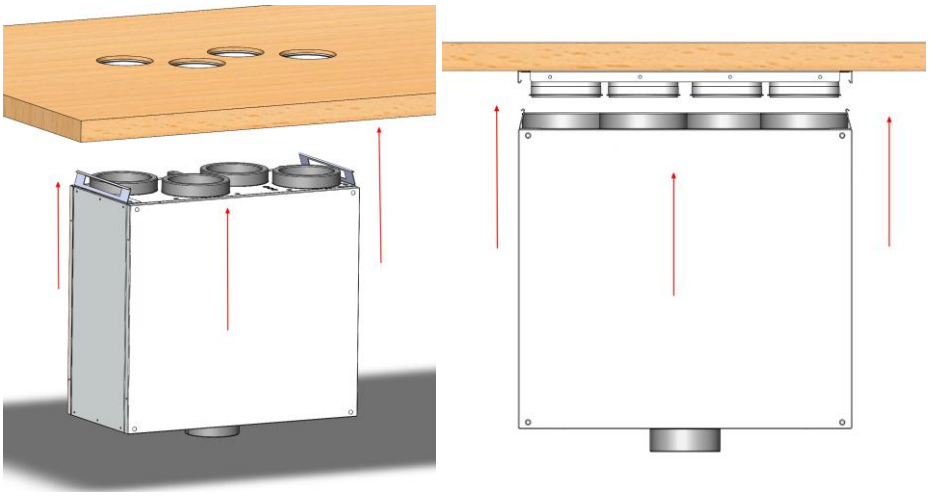

6. You should hear a click sound.

7. Make sure the edge has snapped over and the unit is securely in place.

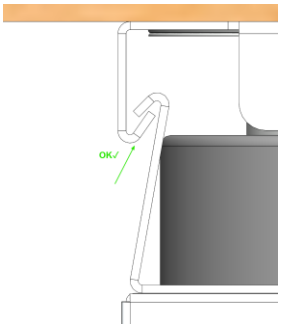

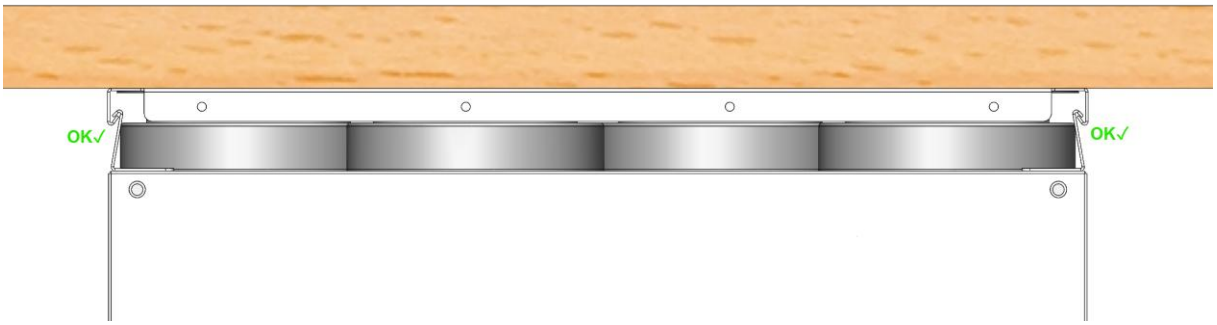
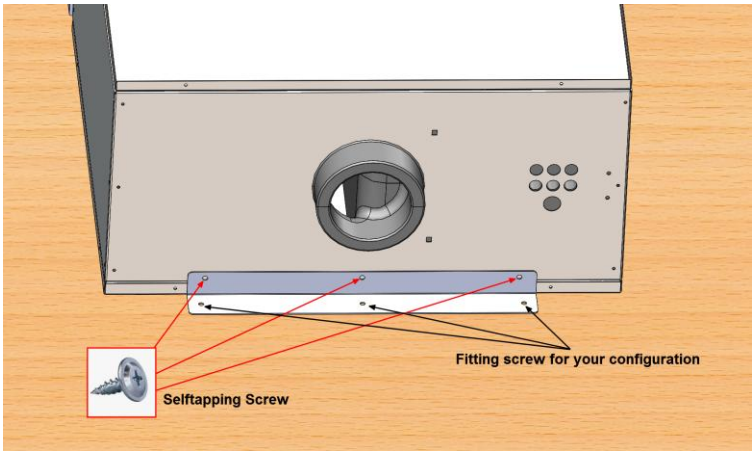
8. Lastly, attach the bottom angle bracket to the unit with sheet-metal screws, and use suitable screws/anchors for the wall.